

Przed użyciem prosimy dokładnie przeczytać instrukcję i zachować ją na przyszłość.

OSTRZEŻENIA DOTYCZĄCE BEZPIECZEŃSTWA

1. Aby uniknąć pożaru lub porażenia prądem, nie używaj tego produktu w pobliżu wody lub w wilgotnym otoczeniu i nie obsługuj urządzenia mokrymi rękami.
2. Zawsze wyłączaj urządzenie i odłączaj je od zasilania, gdy nie jest używane.
3. W przypadku jakichkolwiek nieprawidłowości w funkcjonowaniu, natychmiast zaprzestań korzystania z urządzenia.
4. Nie należy samodzielnie rozkładać urządzenia. Naprawa powinna być wykonana przez producenta lub przez autoryzowanego przez niego serwis.
5. Nie pozostawiaj urządzenia bez nadzoru, gdy jest włączone.
6. Przechowuj z dala od dzieci.
7. Osoby z ograniczeniami fizycznymi, sensorycznymi lub poznawczymi, a także osoby nieznające zasad obsługi urządzenia, nie powinny go używać.
8. Nie czyść urządzenia poprzez polewanie wodą. Przechowuj urządzenie z dala od wilgotnego otoczenia.
9. Do czyszczenia używaj wilgotnej ściereczki i czystej wody lub bardzo łagodnego mydła w płynie.
10. Nie używaj ani nie ładuj maszyny w środowisku zbyt gorącym lub zbyt zimnym.

UWAGA


Maszynka może być lekko ciepła podczas ładowania lub używania, co jest normalnym zjawiskiem w przypadku urządzeń z akumulatorami. Wewnątrz maszyny znajduje się bateria litowo-jonowa. Przed oddaniem maszyny do utylizacji, należy wyjąć baterię i wyrzucić ją we właściwym miejscu, zgodnie z lokalnymi zasadami postępowania z odpadami.



1

INSTRUKCJA ŁADOWANIA


1. Podłącz maszynkę do strzyżenia do ładowarki, aby rozpocząć ładowanie.
2. Podczas ładowania maszynka musi być wyłączona.
3. W trakcie ładowania wskaźnik ładowania będzie świecił na niebiesko.
4. Gdy wskaźnik zgaśnie, oznacza to, że bateria została w pełni naładowana.
5. Po zakończeniu ładowania odłącz maszynkę od ładowarki.

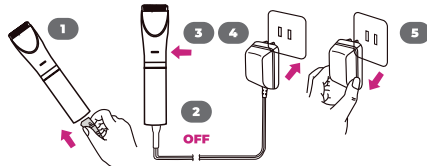

UWAGA!

- Przed pierwszym użyciem naładuj urządzenie.
- Nie dopuszczaj do całkowitego rozładowania baterii - akumulatory Li-Ion najlepiej działają, gdy są doładowywane przed spadkiem do 0%.
- Dla optymalnej kondycji akumulatora zaleca się okazjonalne pełne rozładowanie i naładowanie (np. raz na miesiąc).
- Po około 10 pełnych cyklach ładowania/rozładowania, bateria powinna osiągnąć 100% wydajności.
- Utrzymuj ostrze w czystości i dobrze nasmarowane, aby zapewnić dłuższą żywotność baterii.

INSTRUKCJA UŻYCIA NASADKI DYSTANSOWEJ




Montaż nasadki: chwyć nasadkę z obu stron, dopasuj do gniazda blokującego i naciśnij, aby ją zablokować. Dźwięk „kliknięcia” oznacza, że została prawidłowo zamocowana.

Demontaż nasadki: chwyć nasadkę z obu stron i pociągnij do tyłu.


3

ZAWARTOŚĆ ZESTAWU

- Maszynka do strzyżenia **Blovi Zipp**
- Nasadka dystansowa 3/4 mm
- Nasadka dystansowa 5/6 mm
- Szczoteczka do czyszczenia
- Olejek smarujący
- Zasilacz

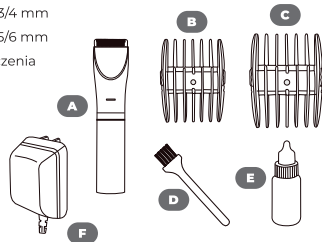

NAZWY ELEMENTÓW

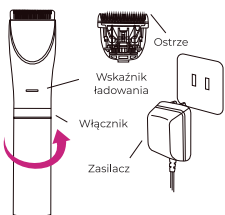

Aby włączyć maszynkę, przekręć dolną część korpusu w prawo, aż usłyszysz charakterystyczny „klik”

PARAMETRY TECHNICZNE

Obrotów silnika: 2700 obrotów/minutę
Typ akumulatora: Li-Ion 3.2V / 500 mA
Czas pracy: 60 minut
Czas ładowania: 120 minut
Ładowarka: wejście AC 100-240V 50/60Hz, wyjście 3.2V
Optymalna temperatura otoczenia podczas ładowania: 5° - 40°
Ostrze: węglowo-chromowe

2

KONSERWACJA URZĄDZENIA

Pociągnij ostrze do tyłu, aby je zdjąć, tak jak pokazano na rysunku.

Cotygodniowe czyszczenie głowicy tnącej:

- Zdejmij ostrze.
- Usuń włosy z ostrza za pomocą szczoteczki.
- Zamontuj ostrze z powrotem.
- Włącz urządzenie.
- Nałóż 2 krople olejku smarującego na zęby ostrza.

Czyszczenie w trakcie użytkowania:

- Utrzymuj urządzenie włączone.
- Użyj szczoteczki na zębach ostrza, kierując maszynkę w dół.
- Użyj olejku smarującego tylko na zęby ostrza.

Twoje ostrze jest teraz czyste, nasmarowane i gotowe do natychmiastowego użycia.

UWAGA

Nie należy stosować agresywnych środków czyszczących. Jeśli zdolność tnąca głowicy maszyny spada pomimo czyszczenia i smarowania, należy ją wymienić. Zużycie ostrza jest zawsze mierzone w kategoriach czasu użytkowania, a nie od momentu zakupu.

GWARANCJA

Prosimy o zachowanie karty gwarancyjnej. Bez niej gwarancja nie będzie honorowana. W okresie jednego roku od daty zakupu, jeśli usterka nie wynika z winy użytkownika, produkt można odesłać do producenta do naprawy. Jeśli problem został spowodowany przez użytkownika, firma może zaoferować naprawę odpłatną.

Okoliczności, w których gwarancja nie obowiązuje:

- Nieprzestrzeganie instrukcji użytkowania lub zaleceń bezpieczeństwa.
- Uszkodzenia spowodowane upadkiem lub zamoczeniem z winy użytkownika.
- Pożar lub katastrofa naturalna.
- Nieprawidłowe napięcie zasilania.
- Ładowanie urządzenia w wadliwych lub nieodpowiednich gniazdkach elektrycznych.
- Użycie w celu innym niż strzyżenie zwierząt.
- Użycie w trudnych warunkach (np. wilgotne otoczenie).
- Samodzielna próba rozkręcenia lub naprawy urządzenia.

4

Please read the manual carefully before use and keep it properly.

SAFETY WARNINGS

1. To avoid fire or electrocution, do not use this product near water or in damp conditions, and do not operate the device with wet hands.
2. Always turn off the device and unplug it when it is not in use.
3. In case of any functional abnormalities, stop using the device immediately.
4. The device should not be disassembled by the user. Repairs should be performed by the manufacturer or an authorized service center.
5. Do not leave the device unattended when it is turned on.
6. Keep out of reach of children.
7. Persons with physical, sensory, or cognitive limitations, as well as those unfamiliar with the operating principles of the device, should not use it.
8. Do not clean the device by rinsing it with water. Keep the device away from wet environments.
9. For cleaning, use a damp cloth and clean water or a very mild liquid soap.
10. Do not use or charge the clipper in an environment that is too hot or too cold.

NOTE


The clipper may become slightly warm during charging or use, which is a normal occurrence for battery-powered devices. The clipper contains a Lithium Ion battery inside. Before disposing of the clipper, the battery should be removed and disposed of in the appropriate place, in accordance with local waste disposal regulations.



1

CHARGING INSTRUCTIONS


1. Connect the clipper to the charger to begin charging.
2. The clipper must be turned off while it is charging.
3. The charging indicator will light up blue.
4. When the indicator turns off, the battery is fully charged.
5. After charging is complete, disconnect the clipper from the charger.

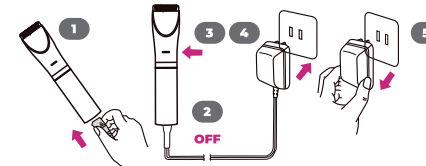

NOTE!

- Charge the device before first use.
- Do not allow the battery to discharge completely — Li-Ion batteries perform best when recharged before reaching 0%.
- For optimal battery calibration, a full discharge/charge cycle may be performed occasionally (e.g., once a month).
- After approx. 10 whole charge/discharge cycles, the battery should reach 100% performance.
- Keep the blade clean and well-lubricated to ensure longer battery life.

INSTRUCTION FOR GUIDE COMB USE




How to install: Hold the comb on both sides, align it with the locking slot, and press to lock. A "click" sound means it has been correctly secured.

How to detach: Hold the comb on both sides and pull back.


3

THE SET INCLUDES

- Blovi Zipp Clipper
- Guide comb 3/4 mm
- Guide comb 5/6 mm
- Cleaning brush
- Lubricant oil
- Power adapter

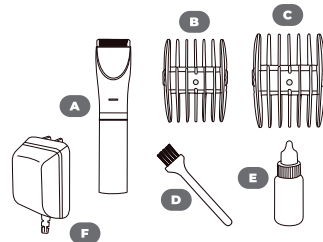

PARTS NAME

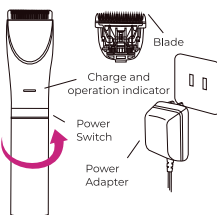

to switch on the clipper, turn the bottom body to the right.

PARAMETERS

Motor Speed: 2700 RPM
Battery Type: Li-Ion 3.2V / 500 mA
Runtime: 60 minutes
Charging Time: 2 hours
Charger: AC input 100-240V 50/60Hz, output 3.2V
Optimal ambient temperature for charging: 5° - 40°
Blade type: Carbon-chromium

2

DEVICE MAINTENANCE

Pull back on the blade to remove it, as shown in the image.

Weekly cleaning of the cutting head:

- Remove the blade.
- Remove hairs from the blade using the brush.
- Reattach the blade.
- Turn on the device.
- Apply 2 drops of lubricant oil to the blade's teeth.

Cleaning during continuous use:

- Keep the device running.
- Use the brush on the blade's teeth, directing the clipper downwards.
- Use the lubricant oil only on the blade's teeth.

Your blade is now clean, lubricated, and ready for immediate use.

NOTE!

If the cutting capacity of the clipper head drops despite cleaning and lubrication, it should be replaced. The wear of the blade is always measured in terms of usage time, not from the date of purchase.

WARRANTY

Please keep the warranty card in a safe place. If the product is repaired without the warranty card or after the warranty period expires, reasonable maintenance fees will apply. If a quality problem occurs within one year of purchase and is not caused by human factors, please send the product to our company for repair. If the issue is caused by human factors, we will still provide maintenance services, but reasonable repair fees will be charged.

Failures or damage caused by the situations listed below are not covered under the warranty (maintenance fees will apply):

- Failure to follow the instructions or precautions.
- The product is dropped, damaged, or exposed to water due to improper handling.
- Fire, natural disasters, or other force majeure incidents.
- Abnormal operating voltage.
- Use of incorrect or severely aged power sockets for charging.
- Use of the device for non-grooming purposes.
- Use in harsh environments such as excessive humidity.
- Unauthorized disassembly by the customer.

4